


BESMOKEY10REM

*See current catalogue for further detail

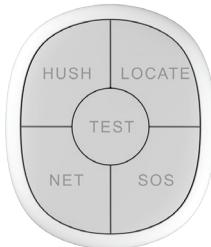

Cleaning Guide:

Spraying cleaning products on to electrical products is not recommended. It is important to ensure that switches are turned off before cleaning.

Do not use any cleaning sprays - only wipe down with damp cloth or rub with dry cloth. (Do not use an abrasive cloth as it may scratch the plastic).

Do not use harsh chemical cleaners as these can break down the plastic and cause it to crack.

BESMOKEY10 Smoke Alarms come with a 10 Year Warranty from date of purchase. BESMOKEY10 Accessories are warranted for 7 Years from date of purchase. Proof of Purchase is required for Warranty Claims

– please see www.gsme.com.au for details regarding warranty claims.

Bear Smoke Alarm Wireless Remote for BESMOKEY10 with Wireless Module (BESMOKEY10WM) installed and BESMOKEY10BW

- Works with the BESMOKEY10 with Wireless Module (BESMOKEY10WM) installed and also BESMOKEY10BW.
- Complies with AS/NZS 4268.
- Power source DC 3V (CR2450) Lithium Button Battery.
- Wireless distance > 5 meters depending on surroundings.
- 433.42MHz Wireless frequency.
- Size 53.1mm x 61.9 mm x 16.3mm.
- Interconnection Max. 40 devices.
- Humidity Range \leq 95% relative humidity (RH).
- Standby current \leq 3uA Operation.
- Current \leq 30mA.
- Operating temperature 0~45°C.
- "Test" button sends the test alarm signal to the smoke alarm.
- "Locate" button detected the smoke alarm is sounding and operating in the alarm status.
- "Hush" button locates the alarm that has initiated the alarm mode situation and hush the smoke alarm for 10 minutes.
- "SOS" button to activate the alarm network and use them to alert people to a non-fire-related emergency.
- 10 year Battery Lifetime.


Warning:

The BESMOKEY10REM is not a toy and should be used carefully. Do not immerse in water or liquids.

The product contains a Lithium button battery that is hazardous and should be kept away from children. The batter may cause fatal injury if swallowed and immediate medical attention should be sought.

If the BESMOKEY10REM is not functioning, please ensure the plastic tab has been removed from the battery compartment. If there is a need to change the battery for any reason, do not handle the battery surfaces with fingers as this may affect the performance as shown below.

Changing the Battery:

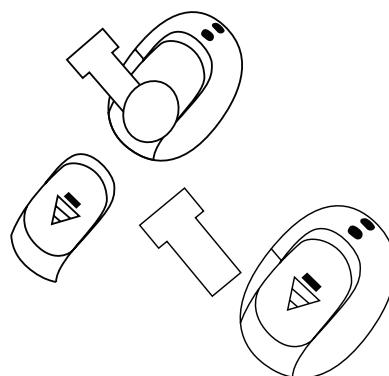

GSM Electrical (Australia) Pty Ltd

Level 2, 142-144 Fullarton Road, Rose Park SA 5067
P: 1300 301 838 F: 1300 301 778 E: service@gsmeltd.com.au
www.gsme.com.au



Battery Warranty



Data Specification Sheet
October 2022

