

BESMOKEYV2SK BESMOKEYV2SKBK

BESMOKEYV2XL

Cleaning Guide:

Spraying cleaning products on to electrical products is not recommended.

It is important to ensure that switches are turned off before cleaning.


Do not use any cleaning sprays - only wipe down with damp cloth or rub with dry cloth. (Do not use an abrasive cloth as it may scratch the plastic).

Do not use harsh chemical cleaners as these can break down the plastic and cause it to crack.

Do not wash the cover plates in water over 60°C.

Smoke Alarm Skirt

- Skirt to suit BESMOKEYV2 and BESMOKEY10 Series to enable 145mm ceiling coverage.
- Perfect for covering miss matched paint marks from old smoke detectors

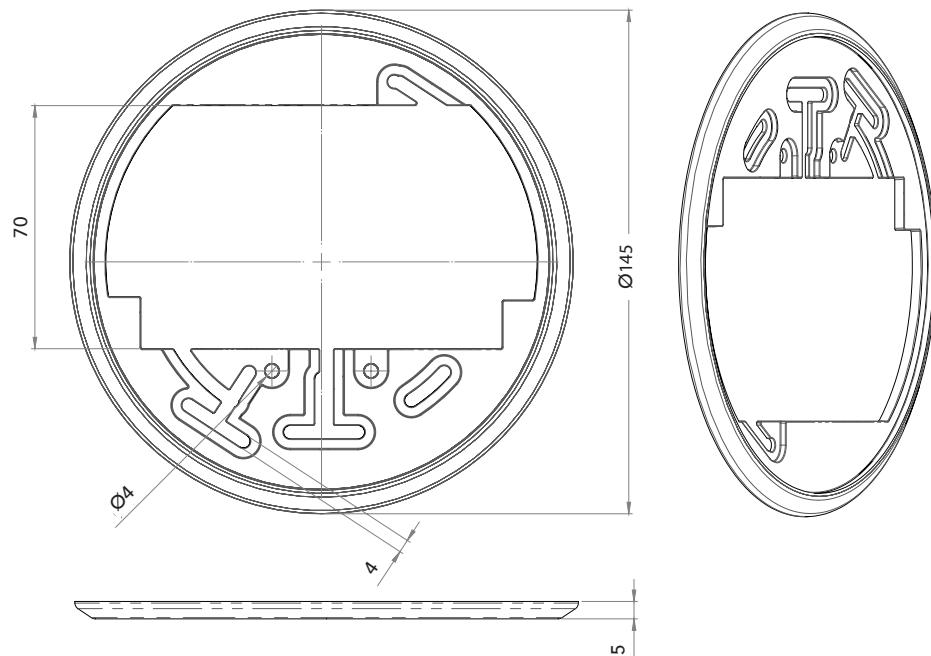

Smoke Alarm Photoelectric & Smoke Alarm Skirt Bundle

- BESMOKEYV2XL is a bundle of the BESMOKEYV2 and BESMOKEYV2SK
- Please see BESMOKEYV2 for more detail.



Catalogue Number	Description
BESMOKEYV2XL	Smoke Alarm Photoelectric Surface Mount, 220-240V AC 9V Battery Backup, Individual or Interconnected Bundled with BESMOKEYV2SK
BESMOKEYV2SK	Smoke Alarm Skirt Suitable with BESMOKEYV2 and BESMOKEY10
BESMOKEYV2SKBK	Smoke Alarm Skirt Suitable with BESMOKEYV2 and BESMOKEY10 Black

