

## COSWVA1G COSWVA2G COSWVA3G COSWVA4G

\*See current catalogue for further detail

### Page 1 of 2

#### Cleaning Guide:


Spraying cleaning products on to electrical products is not recommended.

It is important to ensure that switches are turned off before cleaning.

Do not use any cleaning sprays - only wipe down with damp cloth or rub with dry cloth. (Do not use an abrasive cloth as it may scratch the plastic).


Do not use harsh chemical cleaners as these can break down the plastic and cause it to crack.

Do not wash the cover plates in water over 60°C.

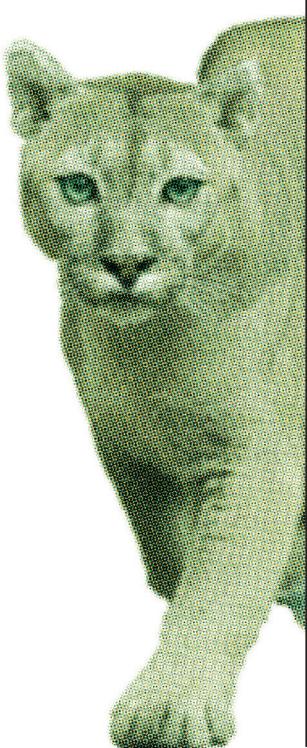

## Cougar Range of Architrave Switch Plates

- Switches are rated 10AX/16A 250V~
- Uses brass tunnel terminals that have the screws backed out for easier installation of cabling. Switches are two way with looping terminal and suit 4 x 1.5mm<sup>2</sup> cabling with 4.1mm bore
- Slotted head screws for the terminals
- Covers, plates and dollies are made from UV stabilised polycarbonate to avoid discolouring to yellow
- Standard colour is white.
- Approved to AS/NZS3133
- Typical example of size seen below:

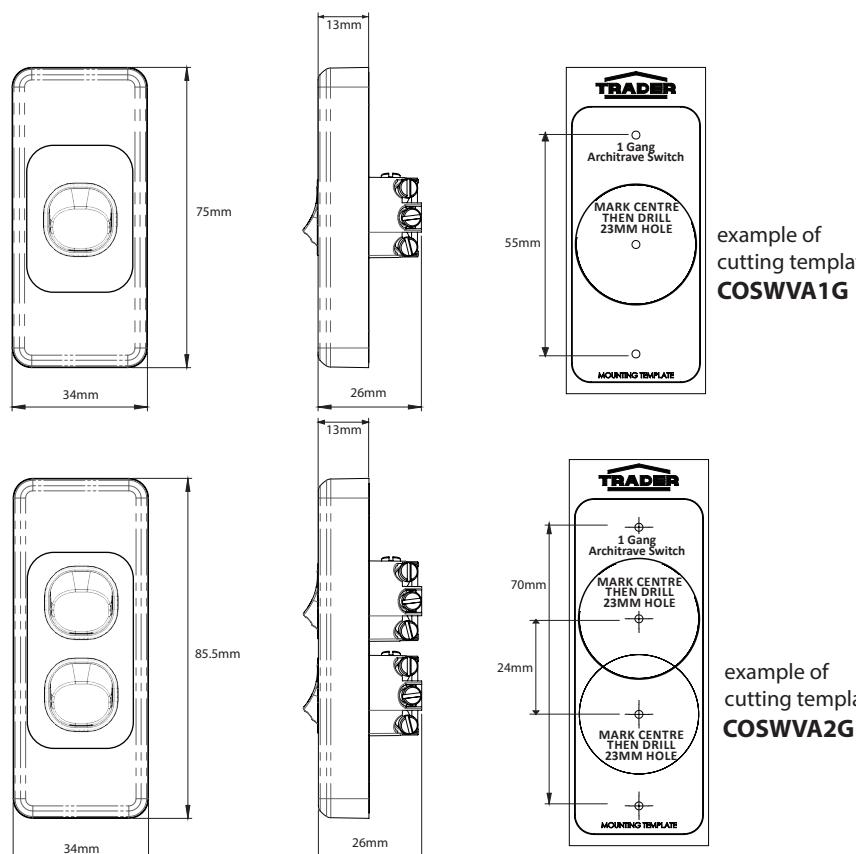

| Catalogue Number | Description                                       |
|------------------|---|
| COSWVA1G         | Switch Vertical Architrave 1 Gang, 10AX/16A 250V~ |
| COSWVA2G         | Switch Vertical Architrave 2 Gang, 10AX/16A 250V~ |
| COSWVA3G         | Switch Vertical Architrave 4 Gang, 10AX/16A 250V~ |
| COSWVA4G         | Switch Vertical Architrave 4 Gang, 10AX/16A 250V~ |



**MEERKAT Switch Mechanisms** are used for all switch plates.  
Please refer to Meerkat Mech Matrix for range compatibility.

**Certification Number:**  
GMA-508434-EA

**GSM Electrical (Australia) Pty Ltd**  
Level 2, 142-144 Fullarton Road, Rose Park SA 5067  
P: 1300 301 838 F: 1300 301 778 E: [service@gmse.com.au](mailto:service@gmse.com.au)  
[www.gmse.com.au](http://www.gmse.com.au)



**COSWVA1G  
COSWVA2G  
COSWVA3G  
COSWVA4G**

\*See current catalogue for further detail

**Page 2 of 2**

**Cleaning Guide:**

Spraying cleaning products on to electrical products is not recommended.

It is important to ensure that switches are turned off before cleaning.


Do not use any cleaning sprays - only wipe down with damp cloth or rub with dry cloth. (Do not use an abrasive cloth as it may scratch the plastic).

Do not use harsh chemical cleaners as these can break down the plastic and cause it to crack.


Do not wash the cover plates in water over 60°C.



## Cougar Range of Architrave Switch Plates

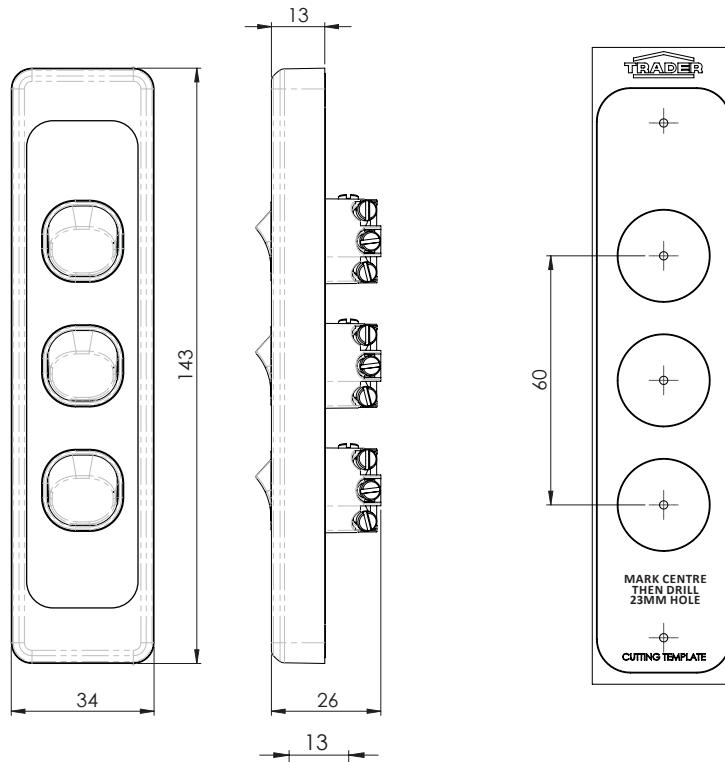

example of  
cutting template  
**COSWVA3G**

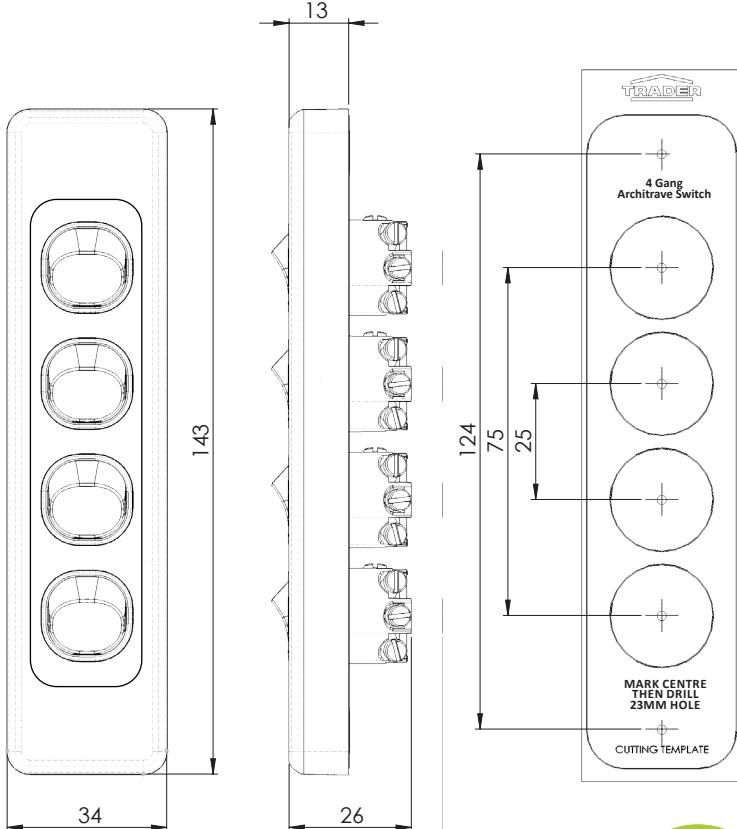

example of  
cutting template  
**COSWVA4G**

**Certification Number:**  
GMA-508434-EA

**GSM Electrical (Australia) Pty Ltd**  
Level 2, 142-144 Fullarton Road, Rose Park SA 5067  
P: 1300 301 838 F: 1300 301 778 E: [service@gmse.com.au](mailto:service@gmse.com.au)  
[www.gmse.com.au](http://www.gmse.com.au)

