

MEPBM
MEPBMBK
MEPBMMW
MEPBMMBK



Cleaning Guide:

Spraying cleaning products directly on to electrical switches or power points (sockets) is not recommended.

It is important to ensure that switches are turned off before cleaning.

Do not use any cleaning sprays - only wipe down with damp cloth or rub with dry cloth. Do not use an abrasive cloth as it may scratch the plastic.

Do not use harsh chemical cleaners as these can break down the plastic and cause it to crack.



Meerkat Momentary Push Button

- 2 Amp 240V~
- This is a momentary push action switch. It makes contact when pushed in, and breaks contact when released. It does not have a snap action feel.
- Available with different print markings which can be ordered through the customer service team.
- Ideal for use in building / lighting control systems as an interface button.
- Suitable for use in all Trader switch plate ranges and most Clipsal* ranges too.
- Buttons can be labelled for identification. Contact TRADER for printing service.

| Catalogue Number | Description |
|------------------|--|
| MEPBM | Push Button Switch, Momentary, 2A 250V~ White |
| MEPBMBK | Push Button Switch, Momentary, 2A 250V~ Black |
| MEPBMMW | Push Button Switch, Momentary, 2A 250V~ Matt White |
| MEPBMMBK | Push Button Switch, Momentary, 2A 250V~ Matt Black |

*The Clipsal brand and associated products are Trademarks of Schneider Electric (Australia) Pty Ltd. and used for reference only

Certification Number: SAA-1730190-EA

GSM Electrical (Australia) Pty Ltd

Level 2, 142-144 Fullarton Road, Rose Park SA 5067
 P: 1300 301 838 F: 1300 301 778 E: service@g sme.com.au
www.g sme.com.au



Data Specification Sheet
 March 2022