

## MK980V



### Care and Cleaning

Before cleaning, turn off the power outlet and unplug the power cord. Wait for the kettle to cool before cleaning it.

- Wipe the exterior of the kettle with a soft, damp cloth or sponge.
- Remove stubborn spots using a cloth moistened with mild detergent. Do not use steel wool or abrasive cleaners. Do not put detergents or cleaning agents in the kettle.
- Do not leave the kettle in direct sunlight as doing so may affect the quality of its finish.
- Removing Calcium Deposits: In order to maintain the performance of your kettle, it is important to remove built-up deposits inside the kettle.

Please follow the Care & Cleaning Instructions in accordance to the Use & Care guide supplied.

## Mistral 1.7 Litre Cordless Kettle

### Features:

- One-touch, push button opening lid
- 360° cordless power base
- Illuminated on/off switch
- Easy-view water window
- Removeable water filter
- 12 Month Warranty

### Product Dimensions:

217 (L) x 155 (W) x 245 (H) mm

Catalogue Number	Description
MK980V	Mistral Cordless Kettle, 1.7 Litre, Touch Push Button, Opening Lid 360° Cordless Power Base

Distributed by:

**GSM Electrical (Australia) Pty Ltd**

Level 2, 142-144 Fullarton Road, Rose Park SA 5067

P: 1300 301 838 F: 1300 301 778 E: [service@gsme.com.au](mailto:service@gsme.com.au)

[www.gsme.com.au](http://www.gsme.com.au)