

MT981V



Care and Cleaning

Turn off the power outlet and unplug the toaster before cleaning, ensuring that the toaster has cooled down.

- Wipe over the exterior of the Toaster and power cord with a soft damp sponge or cloth.

Do not use abrasives or strong household cleaners, as they will damage the brushed chrome finish.

- The crumb trays need to be cleaned occasionally.

Warning: Do not immerse the toaster, power plug or cord in water.

Note: Do not try to clean the inside of the Toaster, as this may damage the heating elements. Water and liquids must never enter the Toaster.

Please follow the Care & Cleaning Instructions in accordance to the Use & Care guide supplied

Mistral 2 Slice Toaster

Features:

- Adjustable browning control with 6 settings
- Cancel function
- Slide out crumb tray for easy cleaning
- 12 Month Warranty

Product Dimensions:

250 (L) x 145 (W) x 167 (H) mm

Catalogue Number	Description
MT981V	Mistral Toaster, 2 Slice, Adjustable Browning Control Stainless-Steel Trim Decorative

Distributed by:

GSM Electrical (Australia) Pty Ltd

Level 2, 142-144 Fullarton Road, Rose Park SA 5067

P: 1300 301 838 F: 1300 301 778 E: service@gsme.com.au

www.gsme.com.au