

RCBO with Tail Instructions

Installation Instruction for short body RCBO with Neutral Tail.


This product **MUST** be installed by a licensed electrician.

To avoid damage to RCBO, disconnect before insulation testing.

Connect the Neutral cable for the circuit before connecting the Line active cable.

Neutral tail length 800mm.


	L: 12mm S: (1-10)mm²
	Recommended 1.5Nm

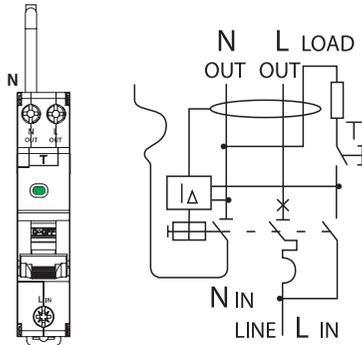


Applications:

- Used in domestic installations as well as commercial electrical distributions systems.
- Protection of circuits against short-circuit currents.
- Protection of circuits against overload currents.
- Protection of circuits against earth leakage currents.


Mounting

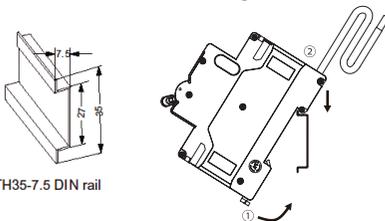

Dismounting

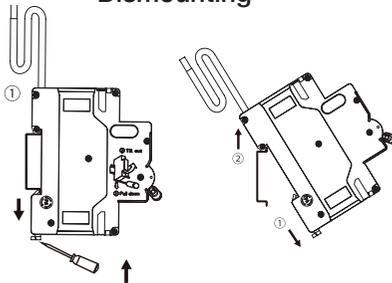

Status Indication

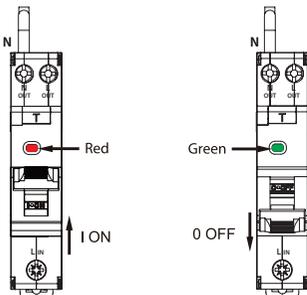

WARNING: If RCBO trips, it may be caused by overload, short circuit or earth leakage. The installation should be checked before resetting RCBO.