

BUSPOK

Pendant Kit Stainless Steel for Switched Outlets

Installation INSTRUCTIONS

Drill out the rear of the box using 5mm drill in the two mounting points shown in the images to align with the stamped BUSPOK bracket.




Align BUSPOK bracket to the box and insert the 5mm pan head screws and add washer and nut to the other end and fasten until tight.

Seal over screw or apply the screw cap - seal with silicone where appropriate.

Once complete the assembly can have other Buffalo components added and cable and jack chain connected.

An alternative assembly arrangement can have a back box suspended on either side of the BUSPOK bracket.

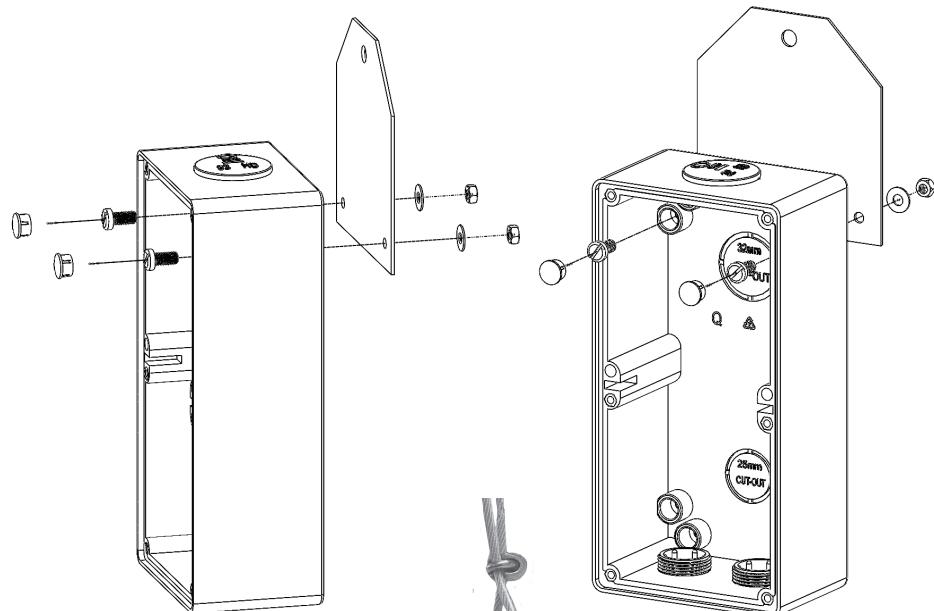

GSM Electrical (Australia) Pty Ltd
 Level 2, 142-144 Fullarton Road, Rose Park SA 5067
 P: 1300 301 838 E: service@gsme.com.au
www.gsme.com.au



Data Specification Sheet
 June 2023